DOUBLE TRUSS OFFSET OUTSIDE DORMER 1

OFFSET - WITH SEPARATION

DOUBLE TRUSS SHARED WITH DORMER 1

ADJACENT

IF THERE IS AN "OPEN TO BELOW" LOFT AT UPPER LEVEL IT

MUST COME TO END OF DORMER OR BEYOND. NOT HALFWAY.

TYPICAL OF ALL DORMER CONFIGURATIONS

WITH OFFSET FROM GABLED END

▃▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▃▗▗▔<mark>▀▀▎▁▐</mark>

IF THERE IS AN "OPEN TO BELOW"

LOFT AT UPPER LEVEL IT MUST
END BEFORE DORMER BEGINS.

DORMER MUST BE AT LEAST (1) TRUSS BAY — AWAY FROM GABLE END

DORMERS SHOWN ARE ALL 4 TRUSS BAY (8' WIDE) DORMERS. EACH STYLE CAN ALSO BE DONE AS 5 TRUSS BAY(10' WIDE) DORMERS.

3 TRUSS BAYS BETWEEN DORMERS WITH GABLED ROOFS.

FOR (2) OR MORE DORMERS AT SAME SIDEWALL, MAINTAIN MINIMUM OF


2 TRUSS BAYS BETWEEN DORMERS WITH SHED ROOFS AND MINIMUM OF


ISSUE DATE 04/20/2023


REVISIONS

REVISION DELTA

DORMER ALIGNMENT

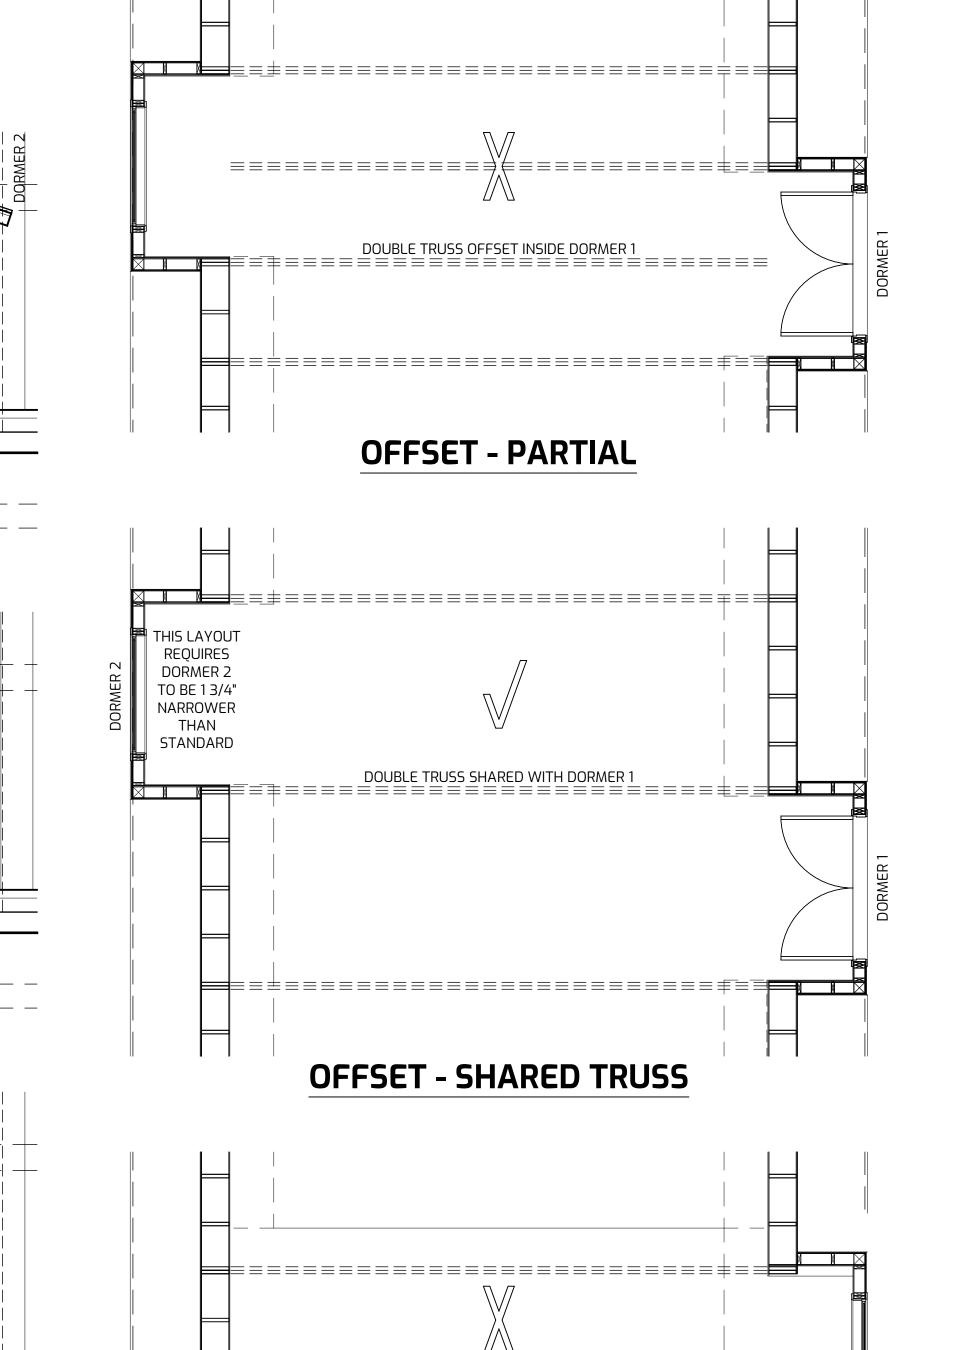

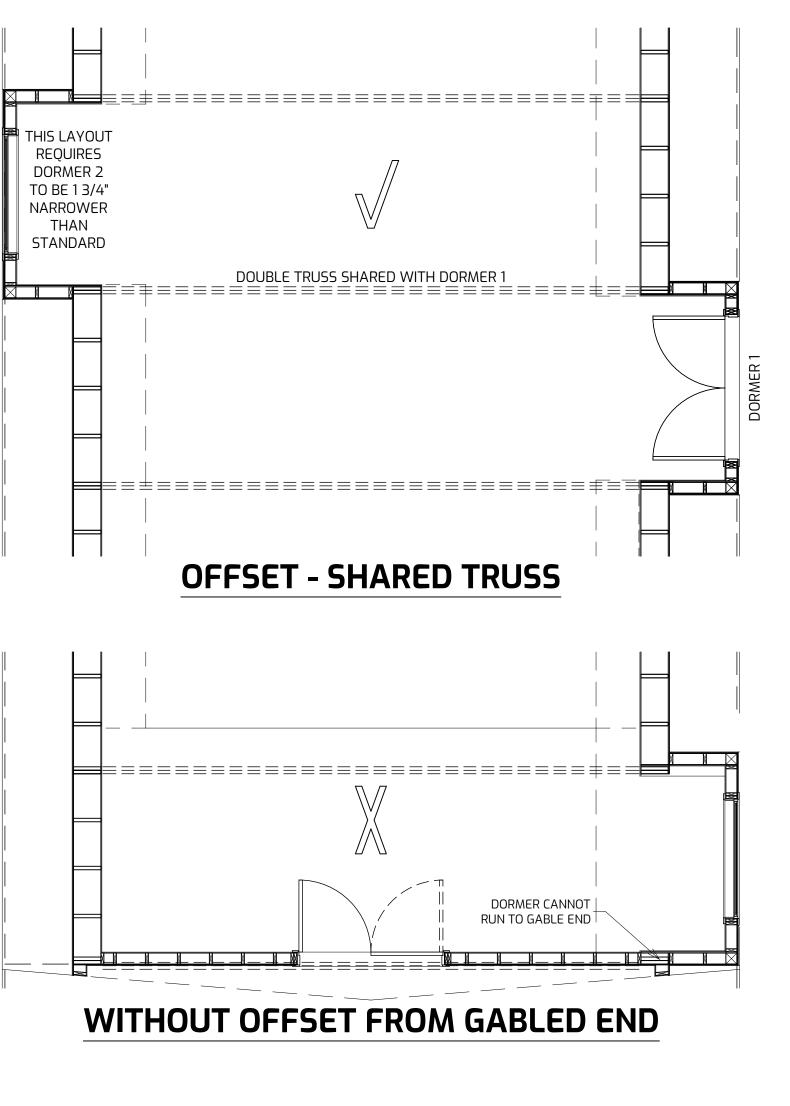

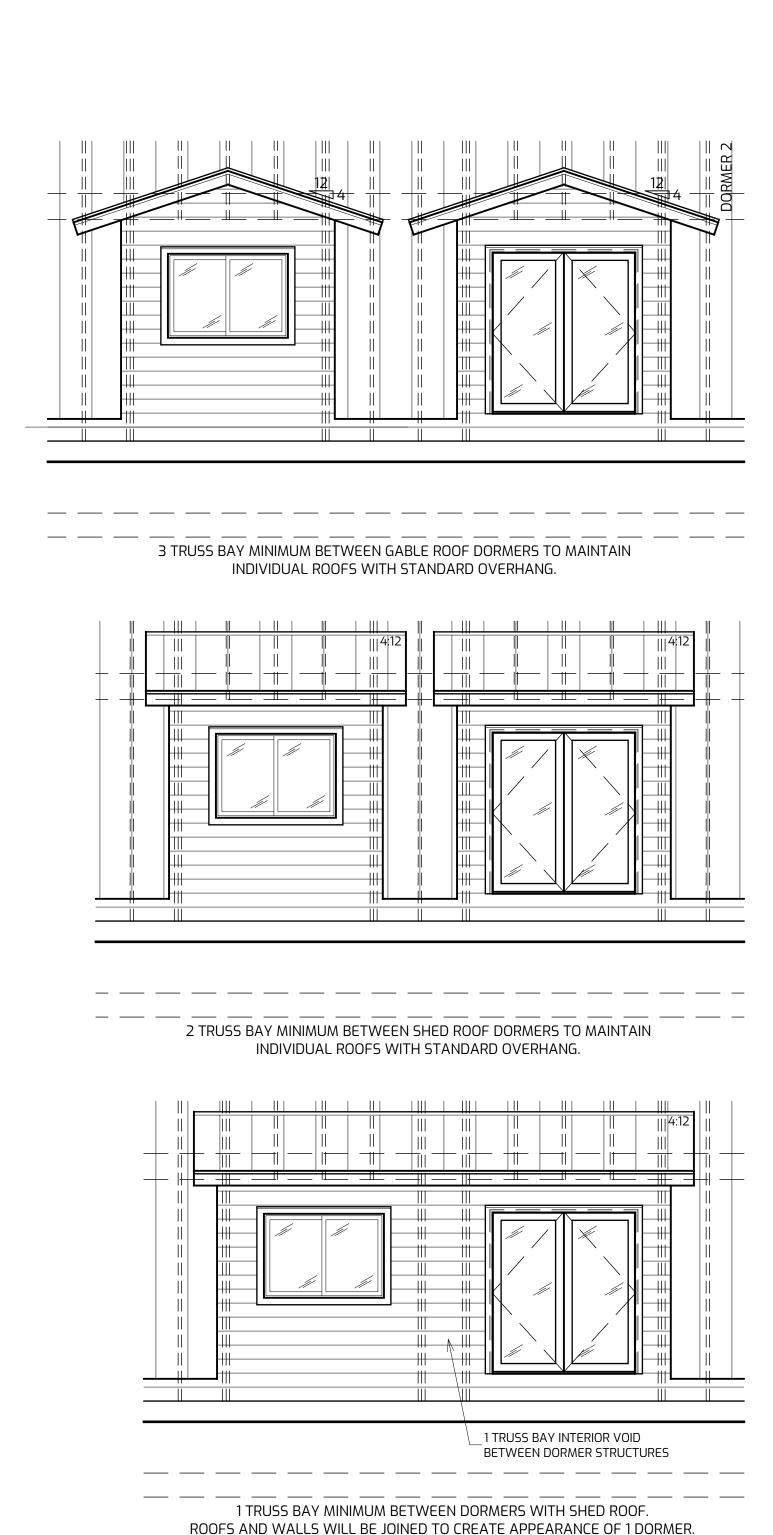

DRAWN FOR ONE-TIME USE FOR AVRAME U.S.A

ISSUE DATE 04/20/2023 REVISIONS

REVISION DELTA

MAIN LEVEL FULL DORMERS